


Marking out a Mortice and Tenon Joint Marcio allan Uniad Mortais anThynno

1) Select timber
1) Dewisiwch eich coed

2) Mark face and edge sides of timber
2) Marciwch wynab a ochr ar y coed

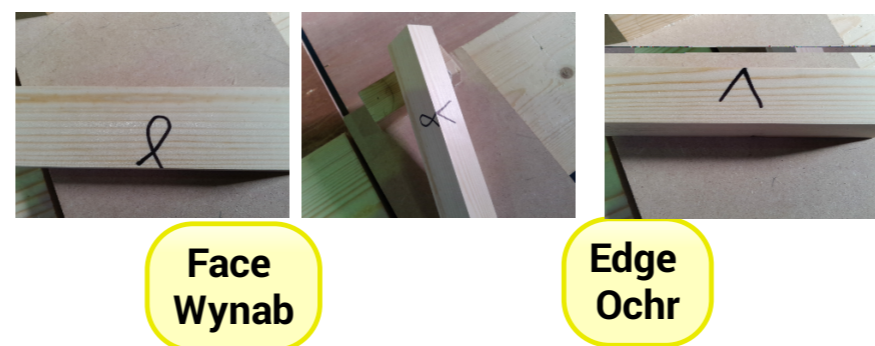

3) Mark out the tenon using the mortice gauge
3) Marciwch allan y thynno efo'r medrydd mortais



Piece A Tenon
Darn A Thynno

3) Mark out the Mortice using the mortice gauge
3) Marciwch allan y mortais efo'r medrydd mortais



Piece B Mortice
Darn B Mortais

1) Set mortice marking gauge to size of mortice chisel
1) Gosod y medrydd mortais l trwch y cyn mortais

1) Mark the thickness of A onto B
1) Marciwch trwch darn A ar darn B

1) Mark the thickness of B onto A
1) Marciwch trwch darn B ar darn A

2) Square off the marked line and transfer around timber
2) Sgwariwch yr lein rownd yr pren

2) Square off the marked lines and transfer around timber
2) Sgwariwch yr ddwy lein rownd yr pren

4) Highlight the marked lines
4) Amlygwch yr llinellau

4) Highlight the marked lines
4) Amlygwch yr llinellau

5) Mark the waste
5) Marciwch yr wast

5) Mark the waste
5) Marciwch yr wast

